


# Tennis...anyone?

The cracks in this court were repaired using traditional methods.

## If you can't afford to do it right... can you afford to do it again?

You've heard *that* before, but here at [INSERT COMPANY NAME], it's not just a catchy rhyme, it's our mantra. Traditional crack repair methods can leave unsightly patches that don't last—resulting in frequent and costly repairs. Tennis court cracks expand and contract with changes in temperature, freezing and thawing and with use. To insure a long-lasting, durable and seamless repair, we use the RiteWay Crack Repair System.

RiteWay is a layered system that becomes an integral part of the tennis court and results in an invisible repair which is not effected by weather or temperature. The installation is so

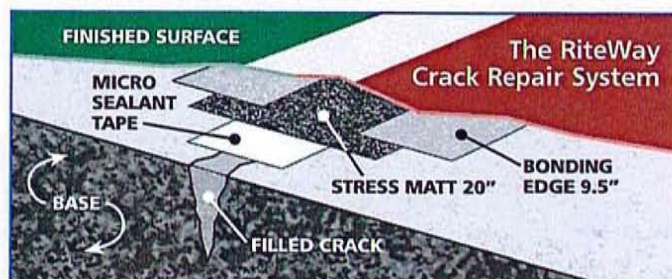

unique that many tennis court owners can't believe its proven success until they see it for themselves.

The RiteWay System utilizes a micro-technology that allows the existing cracks in your court to move without breaking the repair. It not only keeps cracks from coming back, but it eliminates dead spots, hollow sounds and bubbling common with other systems.

## **RiteWay** A durable system in a league of its own.

Crack Repair System



RiteWay Crack Repair System: Laying down micro sealant tape and stress mat.



RiteWay Crack Repair System: Finished repair.

**No Hollow-Sounding Areas. No Dead Spots. No Bubbling. A True Bounce. Guaranteed.**

We've seen the other systems on the market, but no other overlay system can give you the RiteWay results or guarantee. A RiteWay repair comes with a 2-year conditional warranty and is priced 50 to 75% below the cost of reconstruction.

**RiteWay will keep your court looking new and playing safe year after year.**

Works well on these surfaces:

Tennis      Basketball  
Volleyball      Handball  
Inline Hockey      Pickleball

[COMPANY LOGO]

INFO.]

**New England Sealcoating Co., Inc.**

120 Industrial Park Road, Hingham, MA 02043

Toll Free: 800-225-4015 • Fax: 781-749-2780



## Fix Your Cracks — “Do it the RiteWay”

To ensure that you are getting the best crack repair system, include the following bid specifications:

1. Clean out crack making it free of dirt and other debris.
2. Crack to be filled from bottom to top with court patch binder or cement and let dry.
3. Filled crack must be scraped or buffed flush with court and cleaned, broomed and blown.
4. Area to be repaired must be DRY and at 60°F and up to 100°F.
5. Apply RiteWay Crack Repair System, centering the first layer RiteWay MicroSealant™ tape over filled crack. This flexible adhesive layer is key to the system. “Slip sheet” systems are not equivalent.
6. Apply Liquid Acrylic and Latex binding formula (50/50) over MicroSealant™ tape. Apply second layer 20” stress mat centered over first layer saturating with binding formula.
7. Apply binding edge, the third layer of the RiteWay Crack Repair System, centered over stress mat edge. Let dry.
8. When dry, apply a minimum of two coats of acrylic resurfacer with sand lengthwise over crack repair.
9. The courts are ready to be color coated and striped.

[www.RiteWayTennis.com](http://www.RiteWayTennis.com)

***No Dead Spots • No Hollow Sounds • No Bubbling***

Fix your problem cracked courts.

***“Do it the RiteWay.”***

US Patent No.  
7,597,503

RiteWay Tennis Products • 4 Sycamore Way • Branford, CT 06405 • 1-877-5-RiteWay



RiteWay offers a signature court crack repair system that stands in a league of its own. The RiteWay Crack Repair System is a patented system that uses a MicroSealant technology to repair existing court cracks.

← Properly Prepared Crack

## RiteWay Crack Repair System:

1.



↑ Applying RiteWay MicroSealant Tape

2.



↑ Applying RiteWay Stress Mat

3.



↑ Applying RiteWay Bonding Edge

Stress Mat and Bonding Edge are Adhered with Latex and Acrylic Binding Formula.



Finished Repair Ready for Color Coating.

Materials Made in the USA  
[www.RiteWayTennis.com](http://www.RiteWayTennis.com)  
1-877-5-RiteWay

